

## Manual Hands Free HWRT Dispenser Mounting Instructions

**Tools:**

- Screwdriver
- Power Drill with appropriate drill size
- Pencil
- Level and Tape Measure

**Step 1 –** (refer to Fig. 1)

Measure a minimum of **45"** minimum from the floor to the bottom of the dispenser, as marked on template.

**Step 2 –** (refer to Fig. 2)

Place a **level** at the bottom of the dispenser marked on template, level template and tape onto wall. Mark the 4 mounting holes at the hole centers. Remove template and drill 4 pilot holes.


**Step 3 –** (refer to Fig. 2)

Fasten the 2 top screws to the wall, leaving a gap between the screw head and the wall to all allow the dispenser to slide over.

**Step 4 –**

Hang the dispenser on the installed screws. Fasten remaining 2 mounting screws. Be sure to securely tighten all screws.

**Please use the appropriate hardware for the wall material the dispenser is to be mounted to.**

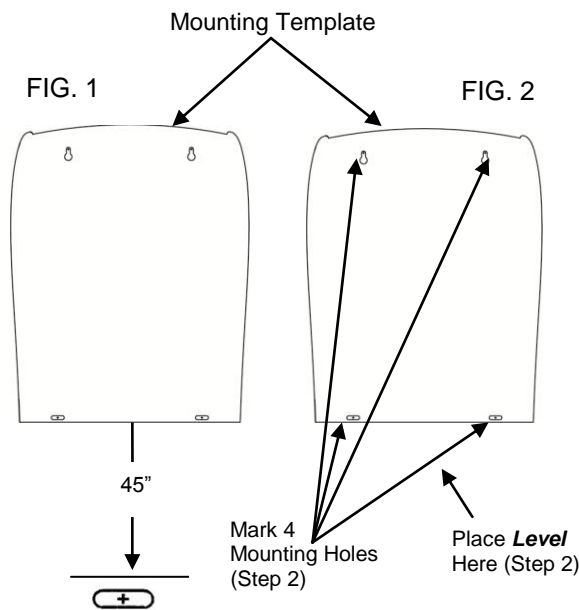

**Note: Mount according to ADA Guidelines, installer is responsible for compliance.**