

Jumbo Roll Bath Tissue Dispenser

Dispenser Numbers: D67031 (Stainless), D67032 (White), D67033 (Black)

Mounting Instructions

Tools:

- Screwdriver
- Power Drill with appropriate drill size
- Pencil
- Level

Step 1 – (refer to Fig. 1)

Measure a minimum of 17.5" minimum from the floor to the bottom of the dispenser.

Step 2 – (refer to Fig. 2)


Drill a pilot hole for the first screw. Use the appropriate wall anchor and attach the screw to the wall, leaving a gap between the screw and the wall then slide the dispenser onto the screw.

Step 3 – (refer to Fig. 2)

Place a level at the bottom of the dispenser to insure dispenser mounting will be correct. Mark the additional 3 mounting holes. Remove dispenser and drill pilot holes.

Step 4 –

Re-hang the dispenser on the installed screw. Fasten remaining 3 mounting screws. Be sure to securely tighten all screws.

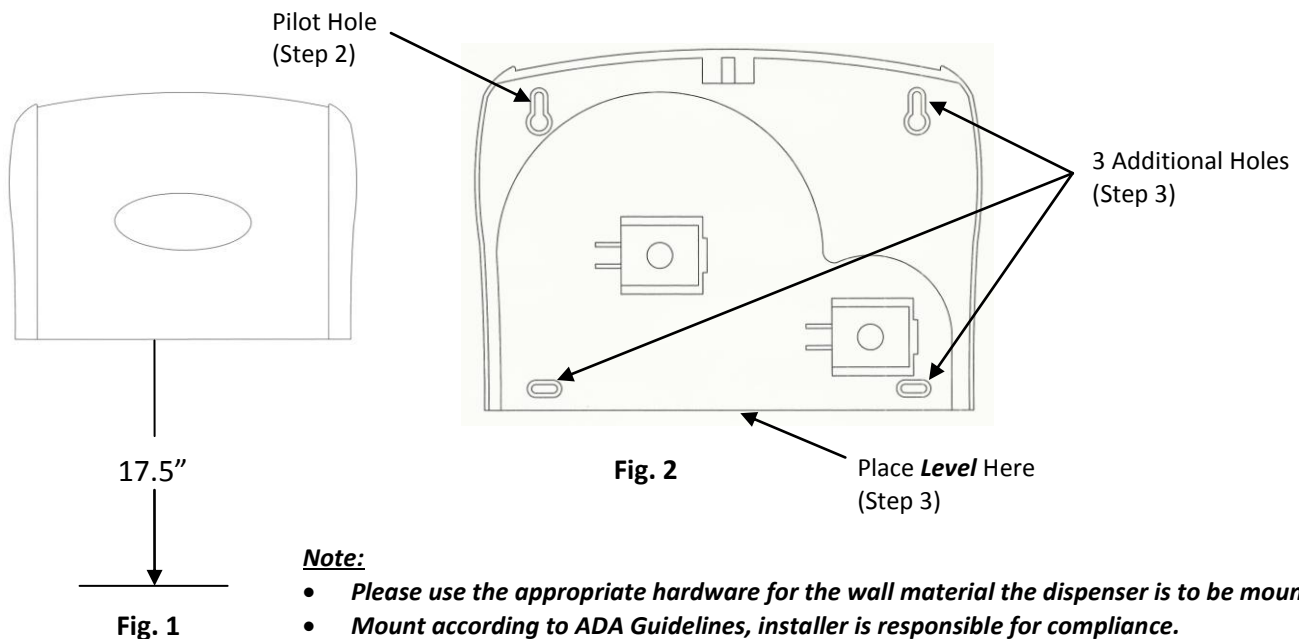

For dispenser questions contact Customer Service at: 1 (844) 896-1321 or dispensers@solarispaper.com